


élite™



ENGLISH

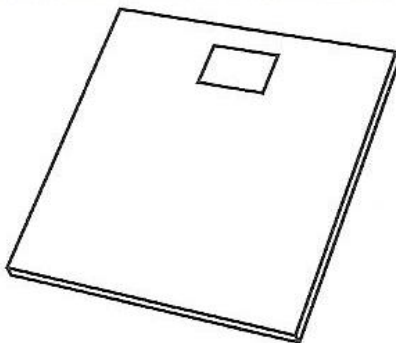

Capacity
180kg x 0.1kg
400lb x 0.2lb

OPERATING INSTRUCTIONS

- Before using the scale for the first time, check the battery compartment and remove any plastic insulation strips or packaging that may be in place to prevent battery drainage during shipping / storage.
- Step on the center of the scale. The scale turns on and starts weighing. Once stable, the numbers will flash and then lock.
- To change the units press the key at the bottom of the scale. It is possible to change between kg/lb/st.
- If the display indicates "Lo" when the scale starts, it means the battery needs to be replaced.
- If the display indicates "Err", it means there is something wrong with the operation. Please restart the weighing process.

REMINDER

- Do not use the scale on carpet.
- Keep the scale dry and away from water.
- Do not overload the scale in order to protect the sensor from damages.
- Avoid movements when standing on the platform to ensure a precise reading.
- Stand in the center of the scale to prevent slipping.
- Do not drop or shock the scale.
- Clean the scale with a slightly damp cloth, DO NOT immerse the scale in water or use chemical/abrasive cleaning agents.

Capacity	180kg x 0.1kg 400lb x 0.2lb 28.6 st,lb	Units	kg, lbs, st,lb
Minimal weight	3kg		
Power source	2 x CR2032		
Auto-off	10 seconds		
Working temp.	10° C - 35° C		



www.myweigh.com