




MyWeigh®


iBALANCE®

i11000

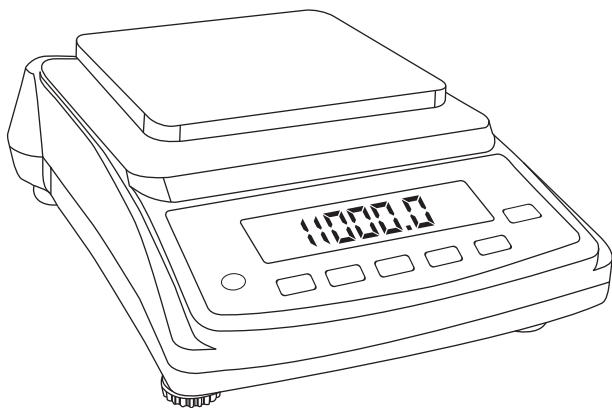

USER MANUAL

iBALANCE® i11000™ USER MANUAL

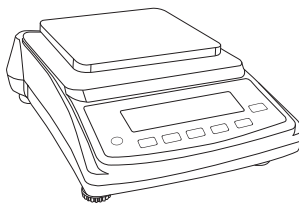

Capacity
11000g x 0.1g

Thank you for purchasing the My Weigh® iBalance® i11000 digital scale. Please read all operating instructions carefully before use. This electronic scale is a precision instrument. With normal care and proper treatment, it will provide years of reliable service. For more information please visit www.myweigh.com.

Never load the scale with more than the maximum capacity. Although the iBalance® i11000 is designed to be extremely durable with extra overload protection built into the case, overloading will permanently damage it! Avoid any exposure to extreme heat or cold, your scale works better when operated at normal room temperature. Keep your scale in a clean environment. Dust, dirt, moisture, vibration, air currents and/or a close proximity to other electronic equipment can all cause an adverse effect on the reliability and accuracy of your scale. Handle with care. Gently apply all items to be weighed onto tray top. Avoid shaking, dropping or otherwise shocking the scale. Scales are delicate instruments and unlike cellular phones, scales have delicate sensors that determine how much an item weighs. If you drop or shock your scale, these sensors “feel” the shock and are sometimes destroyed. This happens with all digital scales. We design our scales to be as resistant to shock or drops as possible, however there is no way for us to protect 100% against load cell or sensor damage. Failure to follow these instructions will void your warranty.

Always allow the scale to acclimate to normal room temperature for at least one hour before use. Give your scale sufficient warm up time. Usually 30-60 seconds before calibration to give the internal components a chance to stabilize.

PRECAUTIONS BEFORE USING THE BALANCE

1. Matter charged with static electricity can affect accuracy. Discharge all static electricity. For example, one method is to use Static-Guard spray, and spray it on both sides of the weighing platform.
2. The balance must be in an exact horizontal position in order to achieve accurate measurement results. In order to bring the balance into a horizontal position, the adjustable feet are turned either clockwise or counter-clockwise until the air bubble on the front panel is in the center of the marked circle.
3. Please use an independent power outlet to avoid interference from other electrical appliances.
4. Do not put any objects on the platform before powering on.
5. When possible please allow the scale to warm up for several minutes before operation.
6. Items should always be placed on the center of the platform when being weighed.
7. For optimum accuracy, recalibrate before each use.

POWER SUPPLY

The i11000 is powered by **DC 6 V/1.3Ah rechargeable battery** or directly **DC 9V - 500mA** power adapter.

OPERATION INSTRUCTIONS

WEIGHING PROCEDURES

1. Place the scale on a flat hard surface.
2. Press **[ON/OFF]** to turn on the scale.
3. Press **[UNITS]** to select a weighing unit g, ct, oz, ozt, dwt, gn, t, lb, gsm, tar, kg.
4. Gently place the items to be weighed on the scale platform.

TARE

Tare can be used for eliminating the weight value of an empty container. Place an empty container on the scale and press **[TARE]**. Then place the items to be weighed into the container. NOTE: When all weight is removed from the weighing tray, the tared value of a container will be displayed as a negative number. Press **[TARE]** again to return the scale to zero.

COUNTING / PCS MODE

1. Press **[ON/OFF]** to turn on the scale. Wait for "0" to appear on the display.
2. Place the sample size on the tray either 10, 20, 50, 100, 150, 200, 250 or 500
3. Press **[PCS]** to enter counting mode (the indicator should be on pcs).
4. Select the sample size by pressing **[PCS]** to toggle either 10, 20, 50, 100, 150, 200, 250 or 500.
5. Remove the samples from the tray and the scale is ready to count.
6. Place the items that you want counted onto the tray. The total number of items will show on the display.
7. Press **[UNITS]** to exit and return to normal weighing mode.

Printing

To print press **[PRINT]**.

Baud Rate: 1200 / 2400 / 4800 / 9600 BPS

Data Format: 8 Data Bit, No Parity Bit, 1 Stop Bit

Output	WEIGHT:	XXXXXXXX	SP	XXX
Note	A	B	C	D

- A- Display Weigh
- B- A Symbolic (+/-) 6 Data, Decimal point
- C- The space character
- D- Unit Weight

CALIBRATION

 

When to calibrate - calibration is RARELY required.

Calibration may be required when the scale is first set up for use, or if the scale is moved to a different altitude or new location. This is necessary because the weight of a mass in one location is not necessarily the same in another location. Also, with time and use, mechanical deviations can occur.

How to calibrate : **you must have an accurate 10kg weight or combination of weights in order to calibrate**

1. Press **[CAL]** to enter calibration mode, the display will flash the required calibration weight.
2. Now place the corresponding calibration weight on the platform, the display will show "-----".
3. Calibration is complete when the display shows the correct reading, you can remove the weight(s).


DISPLAY SYMBOLS

- **→0←** Scale is in ZERO/Tare mode.
-  BATTERY needs recharging.
-  The display reading is UNSTABLE.

SPECIFICATIONS			
Capacity	11000g x 0.1g	Units	g, ct, oz, ozt, dwt, gn, t, lb, gsm, tar, kg
Scale dimension	279mm x 215mm x 99mm		
Tray dimension	150mm x 150mm		
Scale Weight	1.6 kg		
Operating temperature	Optimum 10-40°C (50-104°F)		
Power Source	DC 6 V/1.3Ah rechargeable battery / DC 9V 500mA power adapter		
Tare range	Up to scale's maximum capacity		
Zero range	± 5% of max. capacity		

ADJUSTABLE FEET

on bottom of each corner of the scale

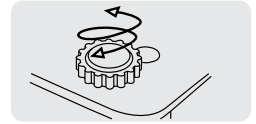

DATA TRANSMISSION PORT

