


**ProScale®**

**LÜR™** 

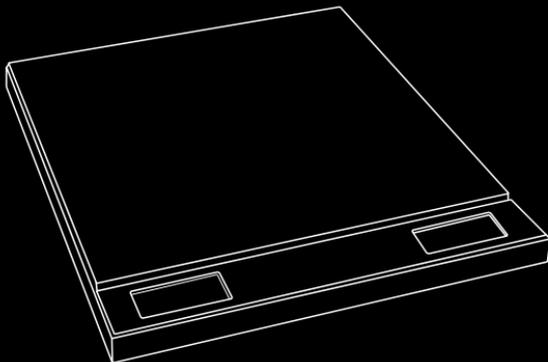

## **USER MANUAL**

Thank you for purchasing a PROSCALE® LÜR™ digital scale. Please read all operating instructions carefully before use. This electronic scale is a precision instrument. With normal care and proper treatment, it will provide years of reliable service.

Never load the scale with more than the maximum capacity. Overloading will permanently damage it! Avoiding any exposure to extreme heat or cold, your scale works better when operated at normal room temperature. Always allow the scale to acclimate to normal room temperature for at least one hour before use. Give your scale sufficient warm up time. Usually 30-60 seconds to give the internal components a chance to stabilize. Keep your scale in a clean environment. Dust, dirt, moisture, vibration, air currents and a close distance to other electronic equipment can all cause an adverse effect on the reliability and accuracy of your scale. Handle with care. Gently apply all items to be weighed onto tray top. Although this scale is designed to be quite durable, try to avoid rough treatment as this may permanently damage the internal sensor. Avoid shaking, dropping or otherwise shocking the scale. This is a precision instrument and must be handled with extreme care.

## OPERATION

1. Place scale on a horizontal flat surface, press [ON/ZERO] key to turn on the scale.
2. Wait until "0.0" is displayed
3. Put the object(s) on the weighing platform
4. Using the [g/lb] key, you can change the weighing units.

## TARE/ZERO

Tare can be used for eliminating the weight value of an empty container. Place an empty container on the scale, press [ON/ZERO]. Then place the items to be weighed in the container. NOTE: When all weight is removed from the weighing tray, the tared value of a container will be displayed as a negative number. Press [ON/ZERO] again to return the scale to zero.

## CLOCK/TIMER SETTING

### 1. General Settings

Please make sure that the scale is in clock mode. To toggle through the modes (Clock, Alarm, Date) press [MODE]. Press [SET] when the scale is in clock mode to enter the menu. Press [SET] again to toggle the settings till you reach the desired mode. Press [MODE] to adjust the selected digit. Press [SET] to confirm..

### 2. Setting the alarm & buzzer

Please make sure that the scale is in the clock mode. Press [SET] to display the alarm time. Press [MODE] to toggle ON and OFF the alarm and buzzer which are indicated by the symbols (🔔) and ((🔔)).

## SPECIFICATIONS

<b>Capacity</b>	5000g
<b>Readability</b>	1g
<b>Modes</b>	g/lb:oz
<b>Tare Range</b>	Full capacity
<b>Auto Off</b>	60 seconds
<b>Op. Temp</b>	15 to 30 degrees C
<b>Display</b>	LCD 5 digits
<b>Power</b>	4 x AAA
<b>Scale Dim.</b>	207 x 175 x 20 mm
<b>Tray</b>	175 mm x 175 mm

## DISPLAY ERROR MESSAGES

 Change the batteries.

[O-LD] You are overloading the scale. Remove the excessive load immediately.

[UnST] Use the scale in a more stable position.



Manufactured in China