

Model JOY / KE 999

Instruction Manual



ADD 'N WEIGH



PLAYS
MUSIC



WEIGHT



BATTERY +
OVERLOAD
INDICATOR



AUTOMATIC
SHUT-OFF



Thank you for purchasing an ADE digital scale. Please read this instruction manual carefully before first use. Keep these instructions for future use.

Scale Initial Setup and Battery Replacement



- This scale operates on one CR2032 battery (included).
- To activate the battery for initial use: Open the battery cover on the bottom of the scale and remove the safety strip. Ensure the correct polarity of the battery (+/-).
- To replace the battery: Open the battery cover and slide the battery down until it can be easily removed. Be careful not to bend the contact. Insert the new battery (1 x CR2032) and close the battery cover.

Scale Powering On/Off

- Place the scale on a flat surface.
- Turn on the scale by pressing the ON/OFF button.
- Scale will be ready for use when 0kg/g or 0.0lb/oz is displayed on the screen.
- This scale is equipped with an auto-off feature to conserve battery power. The unit will turn off automatically after being idle for 2 minutes.
- Turn the scale off manually by lightly touching and holding the ON/OFF button.

Weight and Volume Measurement

- Press the ON/TARE button to change the desired unit of measure (kg/g = kilogram/gram to lb/oz = pounds/ounces)

Tare Function (Add 'n Weigh)

- Place a bowl on the scale and press the TARE button to set the scale to 0
- Weigh your first ingredient
- Press TARE button again to reset to 0, then add and weigh your next ingredient
- Repeat for additional ingredients
- This process can be repeated until the max. capacity of the scale has been reached
- The display will show the total accumulated weight with a negative number after the bowl is removed from the scale

Care Instructions



- Clean the outside of the scale with a slightly damp cloth, do not immerse.



- Avoid contact with citric acid, solvents and abrasive cleaning agents.

Error Messages

Lo = low battery indicator, replace with a new CR2032 battery.

Err = the scale is overloaded. Immediately remove weight from the scale to prevent damage.

Specifications

Scale Capacity:	176 oz. / 5000 g
Increments:	0.04 oz. / 1 g
LCD:	2 ¼" x 1"
Battery:	1 x CR2032 (included)

iPod/iPhone Function:

- Powering ON/OFF:
 - Plug in the included power supply (do not use other power supplies than the one included with your JOY scale)
 - Turn on the scale by changing the switch from 0 to I on the lower black ring of the scale
 - Red LED light next to on/off switch will light up when on
- Docking device:
 - The docking device for the iPod/iPhone is located above the display
 - Take off the black protective cover and insert your iPod/iPhone in the docking device.
- Volume control:
 - Two push buttons (+ and —) are located on the lower black ring of the scale; next to the on/off-switch
 - to control the volume:
 - + = more volume/turn up
 - or — = less volume/turn down
- Connection of additional audio sources:
 - Connect additional audio sources e.g. MP3-player by plugging them in the AUDIO-IN outlet
- Care Instruction Loudspeaker:
 - Turn the inner white ring which is located at the lower platform (OPEN <----> LOCK) to the left towards OPEN
 - The loudspeaker grills opens and can be removed
 - Wipe off the loudspeaker grills using a slightly damp cloth
 - Make sure no moisture gets inside the loudspeaker
 - After cleaning, lower the perforated loudspeaker grills and turn the inner white ring to the right towards LOCK.

Battery Disposal

Please do not dispose of your batteries with the regular household trash. Instead, please bring used batteries to a public collection point in your area or to any outlet selling batteries of the same kind, so they can be disposed of properly.



Batteries are marked as follows:

Li = Battery contains Lithium

Al = Battery contains Alkali

Mn = Battery contains Manganese

CR (Li); A (Al, Mn); AA (Al, Mn); AAA (Al, Mn)

Disposal of old electrical and electronic equipment



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead, it shall be handed over to the applicable collection point for recycling of electrical and electronic equipment. For more detailed information about recycling please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Warranty

ADE warrants for a period of 3 years from the date of purchase that it will remedy any defects due to faulty material or workmanship free of charge by repair or replacement.

If you believe you have a warranty claim, please call FRIELING USA, INC. at 800.827.2582 (or 704.329.5100) between 9:00 a.m. and 4 p.m. Mo - Fri EST before returning the scale.



CE Declaration of Conformity
This device features radio interference suppression
in compliance with valid EC Regulation 2004/108

Note: The displayed value may be adversely affected under extreme electromagnetic influences, e.g. when using a radio unit in the immediate vicinity of the device. Once the interference has been rectified, the product can once again be used for its intended purpose. The device may have to be switched-on again.



Warranty card – 3 year warranty for the JOY Digital Kitchen Scale

• Sender

• Reason for Return

• Date of purchase _____

Please return this warranty card together with your purchase receipt to:

Frieling USA, Inc.
Attn: Warranty Department
1920 Center Park Drive
Charlotte, NC 28217

Instruction Manual: KE999