

This document hosted by

***OldWillKnottScales***

~ ~ CLICK HERE ~ ~



to visit us the next  
time you need a scale!

# **Jennings JTalk 440 User Manual**




# J-TALK™

TALKING BATHROOM SCALE

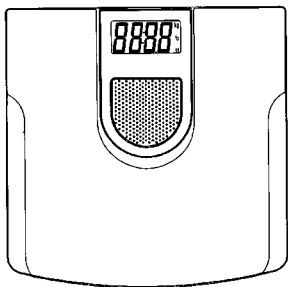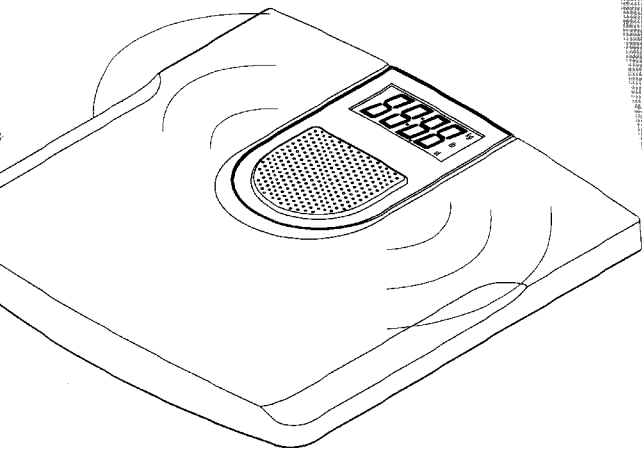

# OPERATING INSTRUCTION

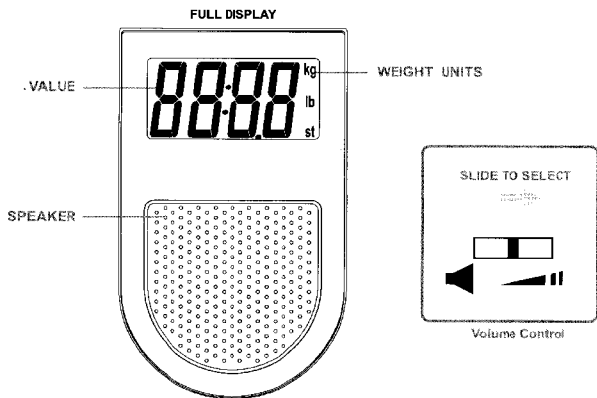

## FEATURES & SPECIFICATION:

- 1) Capacity : 200kg /440 lb /31.7 st
- 2) Weight graduation : 0.1kg / 0.2lb
- 3) Operation temperature : 0~40°C
- 4) Power supply : 1 x 9V battery
- 5) Weight units : kg, lb, st:lb
- 6) Volume control: high, middle and low
- 7) Both Talking and LCD display features
- 8) Auto off in 8 seconds if no operation

9) Low voltage indication: **LO**

10) Error indication: **Err**

11) Overload indication: **Err**

## TO CHANGE BATTERY

Ensure +/- terminals are correct way round.



## TO WEIGH

- 1) Put the scale on a flat hard floor.
- 2) Use your foot once to tap on the scale platform to turn on the scale.
- 3) A voice message will tell you to wait.
- 4) When display shows "0.0", a voice message will tell you to step on to the scale.
- 5) Now step onto the scale and stand still.
- 6) Your weight will be displayed on the LCD, and a voice will tell you the weight at the same time.

**CAUTION:** To avoid water from getting into the holes and damaging the speaker, please don't step on the scale when you are wet.

## Non Slip Strips

Included with the scale are non-slip strips to be installed onto the scale's platform. These help prevent your feet from slipping off of the weighing surface, and possible slip-and-fall accidents. Note that we strongly urge you to never step on the scale with wet feet regardless of use of these strips, to prevent accidental slippage or an accident.

**DANGER - SCALE SURFACE MAY BE SLIPPERY WHEN WET**



**J - TALK**  
TALKING BATHROOM SCALE