



VX Series Floor Scale Instruction Manual



1. INTRODUCTION	1
1.1. SAFETY PRECAUTIONS	1
2. INSTALLATION	1
2.1. Unpacking	1
2.2. Foot Adjustment	2
2.3. Positioning.....	2
2.4. Foot Plates.....	2
2.5. Cable Installation	2
2.6. Legal for Trade Sealing	4
3. OPERATION	5
3.1. Operating Limits.....	5
4. MAINTENANCE	5
4.1. Daily Checks	5
4.2. Cleaning	5
5. TECHNICAL DATA.....	6
5.1. Specifications	6
5.2. Accessories.....	6
5.3. Dimensions.....	7
5.4. Installation of Foot Plates and Ramps	8
5.5. Conformance.....	9
LIMITED WARRANTY	10

1. INTRODUCTION

This manual contains installation, operation and maintenance instructions for the VX Series Floor Scale.

1.1. SAFETY PRECAUTIONS



Please follow these safety precautions:

- Never operate in hazardous areas.
- The VX Series platforms may be used in dry environments only.
- The foundation at the installation site must be capable of safely supporting the weight of the floor scale plus the weight of the maximum load.
- Ensure that vibrations near the installation site are kept to a minimum. This applies also when the floor scale is integrated into conveying systems.

2. INSTALLATION



CAUTION: THE FLOOR SCALE PLATFORM IS VERY HEAVY. ALWAYS USE APPROPRIATE HOISTING EQUIPMENT TO LIFT IT FROM THE PACKAGING AND TO MOVE IT INTO THE REQUIRED POSITION.

2.1. Unpacking

1. Remove the outer packing materials from the top and sides of the Floor Scale.
2. Carefully lift the Floor Scale from the packing material, see caution notice above.
3. Available hoisting methods include the use of eye bolts and chains (not included). 10,000 lb models have two threaded holes on the top surface that will accept 3/4" - 10 eye bolts. Lower capacity models have unthreaded holes at 3 locations, two 1 1/16" holes on the front panel and one 5/8" hole on the back panel. The use of eye bolts on the unthreaded holes will require the addition of matching nuts placed behind the panels. See figures 1a and 1b.

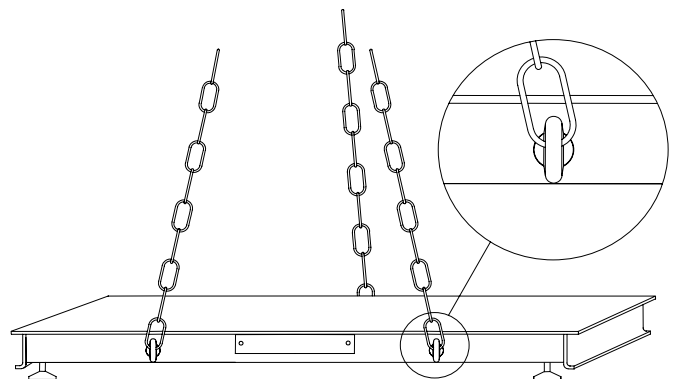
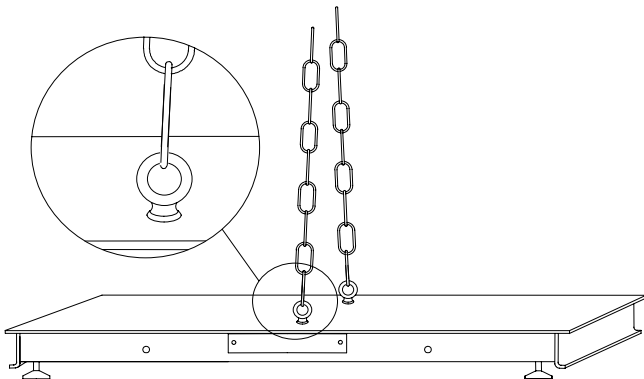


Figure 1a. Optional hoisting method 10000 lb models.

Figure 1b. Optional hoisting method 5,000 lb and lower capacity models

2.2. Foot Adjustment

1. The four feet must be adjusted out of the shipping position and into the operating position. Use a 1-3/8" wrench to loosen each foot and extend them to 4-1/2" (114mm) measured from the top surface of the platform.
2. At this position use a 1/2" wrench to rotate the jam nuts until they lock against the load cell. See figures 1c and 1d.

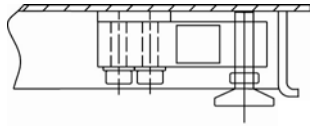


Figure 1c. Load Cell Foot in shipping position.

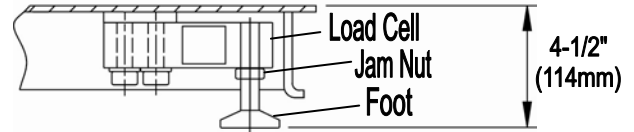


Figure 1d. Load Cell Foot in nominal operating position.

2.3. Positioning

1. Ensure the surface is flat in the area where the scale will be positioned, especially in the region of the load cell feet.
2. If an Indicator is included with the floor scale, ensure that it is kept with the floor scale during positioning as there may be an attached connecting cable.
3. Position and lower the scale on to the final work area.
4. If floor plates or ramps are to be installed, these must be installed before final set up.
5. Check that the floor scale is level and check that all 4 feet are in full contact with the floor, use an external level on the top surface. If an adjustment is needed, first loosen the 1/2" jam nut near the top of the foot and rotate the bottom section of the foot. After adjusting, retighten the jam nuts. Recheck that all 4 feet are still in full contact with the floor.
6. Do not adjust the feet fully inward as this could cause interference with the top surface and result in weighing errors.
7. Ensure that the floor scale's output cable does not become trapped or crushed during lifting or positioning.

2.4. Foot Plates

Foot Plates (included) may be mounted around the feet to help prevent movement of the platform. Installation of the Foot Plates must be done before final placement of the scale (refer to the section 5.4 for Foot Plate installation).

2.5. Cable Installation

If the Floor Scale system was received with a pre-attached cable connected between the platform and Indicator components this section can be skipped over. If the components were purchased separately or if a cable was not attached to either component follow the steps below to make the proper cable connections.



Risk of Electrical Shock

Disconnect all power sources before making cable connections to the Floor Scale platform or Indicator. Cable Connections should only be made by authorized and qualified personnel, such as an Electrical Technician.

Connecting the Platform Cable

1. Remove the two fasteners on the junction box access cover located on the side panel of the platform.
2. Slide the junction box forward and out of the compartment. Remove the plastic top cover from the junction box.
3. Loosen the water-tight gland that does not have a cable inserted. Insert about 6" (150mm) of the cable through the gland and into the junction box.
4. At the junction box end strip the outer jacket of the cable 1.5" (40mm) then strip 0.25" (6mm) from each single wire end.
5. On the cable determine which wire connects to the cable's shielding. This is normally a Bare wire. Optionally the shield may be twisted into a pig-tail. This shield connection must always be connected to the point marked "SHIELD" or "GND".*
6. Connect the wire ends to the "INPUT" terminal block inside the junction box, see Figure 2. The Shield wire must be connected to the connection marked "SHIELD". The remaining wire colors may be connected to the terminal block in any arrangement though a recommended color chart is shown below in Table 1. If a label is attached to the cable follow the color code listed on the label instead.
7. After making all connections make a record of the wire color to signal names. This information will be needed when connecting the Indicator to the other end of the cable.
8. Route the other end of the cable into the platform's junction box compartment and pass it out through the rear opening.
9. Reinstall the plastic top to the junction box, tighten the water-tight gland around the cable, return the junction box to the internal compartment, reinstall the external cover and fasteners.
10. Route the cable out from under the platform to the location where the Indicator will be mounted. Ensure that the cable will be protected against possible damage when routed to the Indicator.
11. The cable near the platform must lie free without tension. Excessive tension may result in weighing errors.

TABLE 1. RECOMMENDED WIRE COLOR TO SIGNAL NAME CONNECTIONS

Cable Wire Colors	Indicator and Platform Signal Names
Green	+EXC
Red	+SEN
Blue	+SIG
White	-SIG
Brown / Yellow*	-SEN
Black	-EXC
Bare / Yellow*	SHIELD (GND)

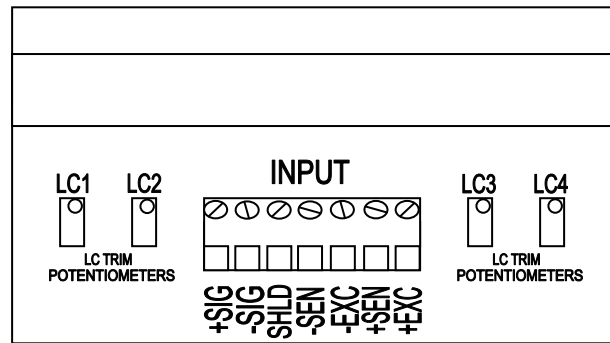


Figure 2. Junction Box Terminal Block.

*Note: The standard cable included with the VX Floor Scale will have either a Bare wire or a Yellow wire connected to the Shield. On some cable assemblies a label may be attached listing the Shield wire and the recommended wire color connections.

Connecting the Indicator Cable

1. Route the cable from the platform to the location where the Indicator will be mounted.
2. The cable near the platform must lie free without tension. Excessive tension may result in weighing errors.
3. Ensure that the cable will be protected against possible damage when routed to the Indicator.
4. Consult the installation instructions of the Indicator to properly connect the cable wires to the Indicator.
5. Use the recorded wire color information from the platform connections to make the proper wire connections.

2.6. Legal for Trade Sealing

If required the junction box may be sealed as shown in Figure 3. The junction box is accessed by removing the cover plate on the FRONT side panel of the platform.

Consult the instructions of the Indicator to properly seal the Indicator component for Legal for Trade applications.

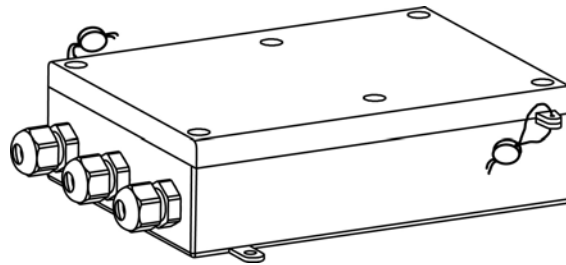


Figure 3. Junction Box Sealing, Wire & Crimp Seal at opposing corners


3. OPERATION

For setup, calibration, and proper operation, refer to the instruction manual supplied with the indicator. Refer also to Section 5.1 below for floor scale capacity and readability information.

3.1. Operating Limits

Although the floor scales have extremely rugged construction, certain load limits must not be exceeded. The maximum admissible loading is shown in Table 2.

TABLE 2. MAXIMUM ADMISSIBLE LOADING

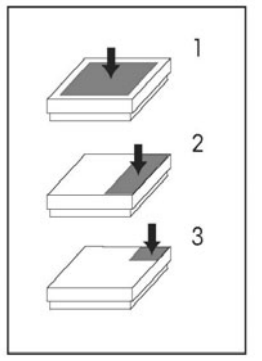Model	Maximum Central load ¹ (80% Surface Area)	Maximum Side load ² (30% Surface Area)	One Side Corner Load ³ (10% Surface Area)	
VX2500L	2,500 lb / 1,130 kg	2,500 lb / 1,130 kg	1,250 lb / 565 kg	
VX5000L VX5000X	5,000 lb / 2,265 kg	5,000 lb / 2,265 kg	2,500 lb / 1,130 kg	
VX10000L VX10000X	10,000 lb / 4,530 kg	10,000 lb / 4,530 kg	5,000 lb / 2,265 kg	

4. MAINTENANCE

4.1. Daily Checks


- Check that the feet are properly seated in the holes of each load cell.
- Check that the 4 feet are in full contact with the floor.
- Check that the scale is free from debris, especially under and around the edges of the scale.
- Check that there is no damage to the connecting cable.

4.2. Cleaning



Risk of Electrical Shock

Disconnect the power source before cleaning the scale with any liquids.

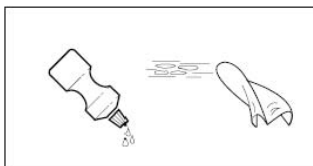

Exterior maintenance of the floor scale is limited to regular cleaning.

- Wipe surfaces with a damp cloth.
- Use only common household cleaning agents.
- Never use water spray or high pressure cleaners.
- Keep the air gap at the edge of the platform free of debris.

5. TECHNICAL DATA

5.1. Specifications

TABLE 3. FLOOR SCALE SPECIFICATIONS

Platform Models	VX2500L	VX5000L	VX10000L	VX5000X	VX10000X
Platform Dimensions (W x D x H)	4' x 4' x 4.5' / 1,219 x 1,219 x 114 mm			5' x 5' x 4.5' / 1,524 x 1,524 x 114 mm	
Capacity x Θ min	2,500 lb x 0.5 lb / 1,000 kg x 0.2 kg	5,000 lb x 1 lb / 2,200 kg x 0.5 kg	10,000 lb x 2 lb / 4,500 kg x 1 kg	5,000 lb x 1 lb / 2,200 kg x 0.5 kg	10,000 lb x 2 lb / 4,500 kg x 1 kg
Resolution	NTEP 5000d	NTEP 5000d	5000d	5000d	5000d
Material	Epoxy painted carbon steel, treaded surface, fixed top plate, thickness 1/8" (up to 5000lb), 5/16" (10,000lb)				
Load Cell	4 x Shear Beam, IP67, Nickel plated alloy steel, NTEP C3				
Load Cell Output Impedance	350 Ω \pm 3 Ω				
Load Cell Excitation Voltage	5V ~15V DC/AC				
Junction Box	Side panel access, IP65 plastic case, 25' (7.6m) cable length				
Feet	4 x fixed bolt design, adjustable height				
Operating Temperature	50°F to 104°F / 10 °C to 40 °C				
Net Weight	185 lb / 84 kg		437 lb / 198 kg	280 lb / 127 kg	660 lb / 300 kg
Shipping Weight	250 lb / 113 kg		500 lb / 227 kg	340 lb / 154 kg	720 lb / 327 kg
Shipping Dimensions (W x D x H)	5' x 4' x 1' / 1,524 x 1,219 x 305mm			6' x 5' x 1' / 1,524 x 1,829 x 305mm	

5.2. Accessories

TABLE 4. LIST OF ACCESSORIES

Item	Part Number
Ramp, 4', Painted Steel, for VX2500L / VX5000L	80252766
Ramp, 5', Painted Steel, for VX5000X	80252767
Ramp, 4', Painted Steel, for VX10000L	80252795
Ramp, 5', Painted Steel, for VX10000X	80252796
Ball-in-cup Feet, Set of 4	80252833

5.3. Dimensions

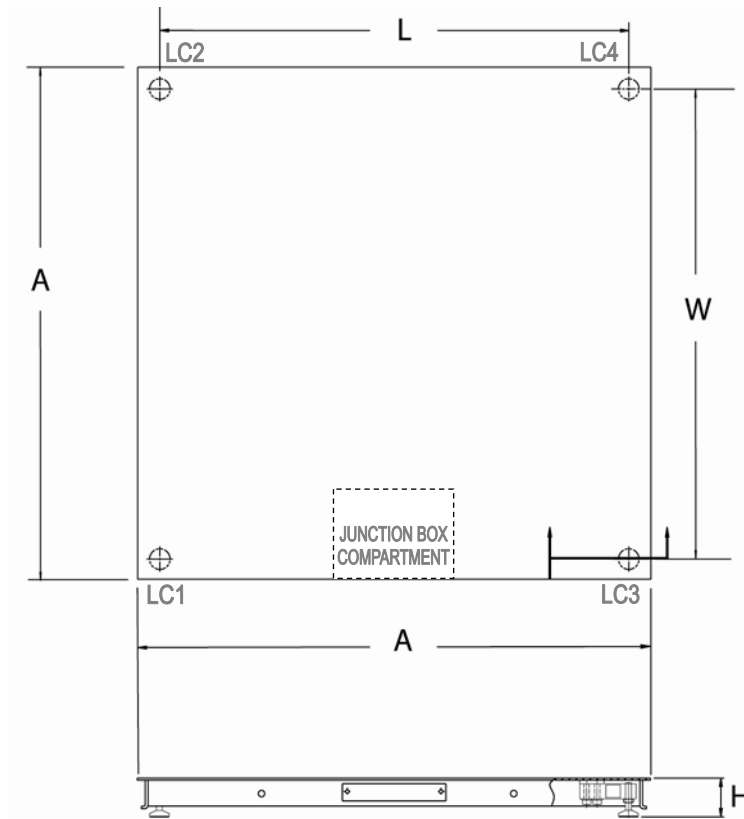


Figure 4. Floor Scale Dimensions

TABLE 5. FLOOR SCALE DIMENSIONS

MODELS	DIMENSIONS			
	FLOOR SCALE PLATFORM		FOOT CENTERS	
	A	H (nominal)	W	L
VX2500L / VX5000L	4' / 1,219 mm	4.5" / 114 mm	42.5" / 1,080 mm	42.5" / 1,080 mm
VX5000X	5' / 1,524 mm	4.5" / 114 mm	54.5" / 1,384 mm	54.5" / 1,384 mm
VX10000L	4' / 1,219 mm	4.5" / 114 mm	39.5" / 1,003 mm	39.5" / 1,003 mm
VX10000X	5' / 1,524 mm	4.5" / 114 mm	51.5" / 1,308 mm	51.5" / 1,308 mm

5.4. Installation of Foot Plates and Ramps

Two Foot Plates are included with the Floor Scale. Ramps are available separately. Installation of Floor Plates or Ramps is optional but must be done before final placement of the Floor Scale. Refer to Figures 5 and 6 for mounting of the Foot Plates and Ramps.

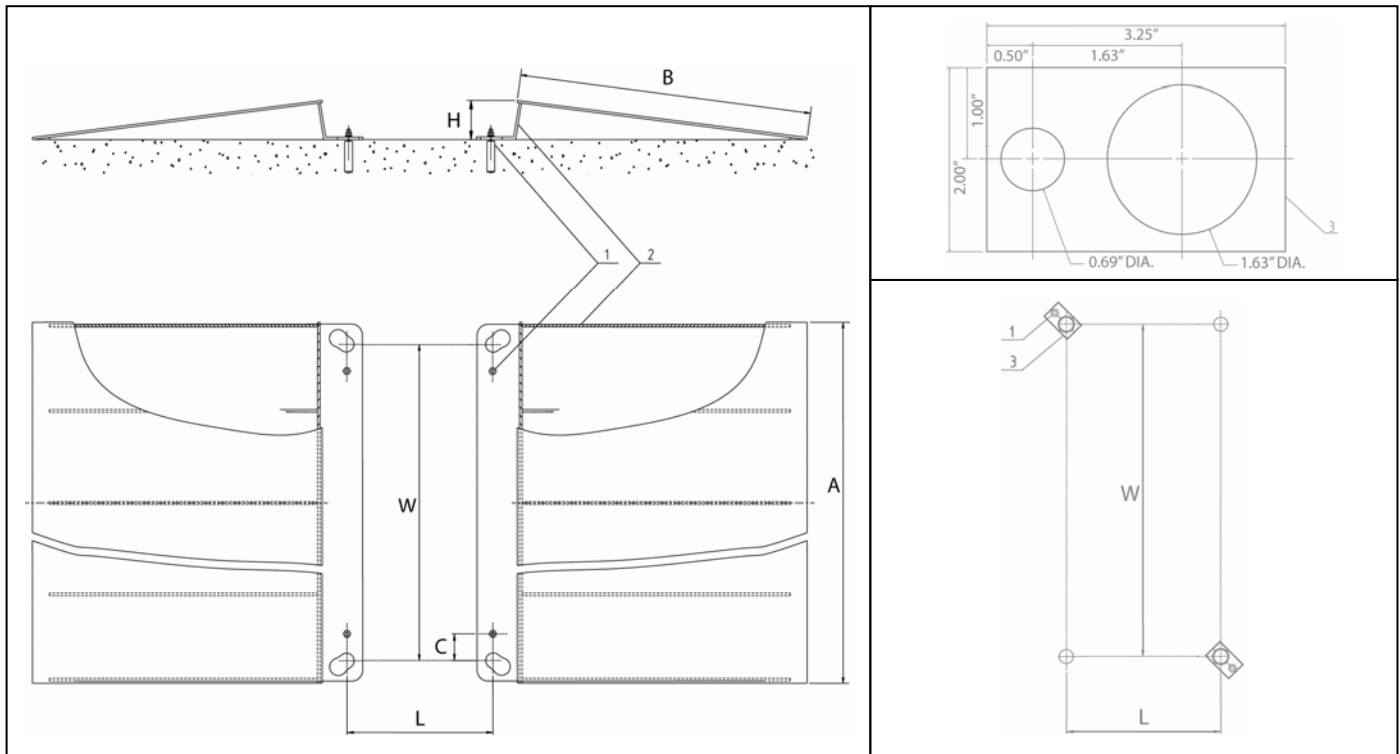


Figure 5. Optional Ramp Installation

Figure 6. Foot Plate & Installation

LEGEND: 1.Expanding Bolt Assembly, 2.Ramp, 3.Floor Plate

- Notes: 1. For the Expanding Bolts (included) drill 0.5" (12.5mm) holes into the solid floor surface. Depth must equal bolt length.
- 2. The required Ramp & Foot Plate center to center dimensions W, L and C are shown in Table 6.
- 3. Installation of Foot Plates in a diagonal arrangement (see Figure 6) provides optimal prevention of platform movement.
- 4. Before tightening the expanding bolts pretest the installation by temporarily positioning the platform over the foot holes.
- 5. When properly positioned the feet must rest within the holes of the Ramps or Foot Plates.
- 6. Ensure that a free air gap always exists between the sides of the platform and the edges of the installed Ramps.

TABLE 6. DIMENSIONS FOR FLOOR PLATE AND RAMP INSTALLATION

MODELS	DIMENSIONS					
	RAMP				RAMP & FOOT PLATE CENTERS	
	A	B	C	H (nom)	W	L
VX2500L / VX5000L	4' / 1,219 mm	4' / 1,219 mm	3.5" / 89 mm	4.5" / 114 mm	42.5" / 1,080 mm	42.5" / 1,080 mm
VX5000X	5' / 1,524 mm	4' / 1,219 mm	3.5" / 89 mm	4.5" / 114 mm	54.5" / 1,384 mm	54.5" / 1,384 mm
VX10000L	4' / 1,219 mm	4' / 1,219 mm	3.5" / 89 mm	4.5" / 114 mm	39.5" / 1,003 mm	39.5" / 1,003 mm
VX10000X	5' / 1,524 mm	4' / 1,219 mm	3.5" / 89 mm	4.5" / 114 mm	51.5" / 1,308 mm	51.5" / 1,308 mm

5.5. Conformance



This product conforms to the EMC directive 89/336/EEC and the Low Voltage Directive 73/23/EEC. The complete declaration of Conformity is available from Ohaus Corporation.

Disposal

In conformance with the European Directive 2002/96 EC on Waste Electrical and Electronic Equipment (WEEE) this device may not be disposed of in domestic waste. This also applies to countries outside the EU, per their specific requirements.



Please dispose of this product in accordance with local regulations at the collecting point specified for electrical and electronic equipment.

If you have any questions, please contact the responsible authority or the distributor from which you purchased this device.

Should this device be passed on to other parties (for private or professional use), the content of this regulation must also be related.

Thank you for your contribution to environmental protection.

For disposal instructions in Europe, refer to www.ohaus.com/weee.

ISO 9001 Registration

In 1994, Ohaus Corporation, USA, was awarded a certificate of registration to ISO 9001 by Bureau Veritas Quality International (BVQI), confirming that the Ohaus quality management system is compliant with the ISO 9001 standard's requirements. On May 15, 2003, Ohaus Corporation, USA, was re-registered to the ISO 9001:2000 standard.

LIMITED WARRANTY

Ohaus products are warranted against defects in materials and workmanship from the date of delivery through the duration of the warranty period. During the warranty period Ohaus will repair, or, at its option, replace any component(s) that proves to be defective at no charge, provided that the product is returned, freight prepaid, to Ohaus.

This warranty does not apply if the product has been damaged by accident or misuse, exposed to radioactive or corrosive materials, has foreign material penetrating to the inside of the product, or as a result of service or modification by other than Ohaus. In lieu of a properly returned warranty registration card, the warranty period shall begin on the date of shipment to the authorized dealer. No other express or implied warranty is given by Ohaus Corporation. Ohaus Corporation shall not be liable for any consequential damages.

As warranty legislation differs from state to state and country to country, please contact Ohaus or your local Ohaus dealer for further details.



Ohaus Corporation
19A Chapin Road
P.O. Box 2033
Pine Brook, NJ 07058-2033, USA
Tel: (973) 377-9000
Fax: (973) 944-7177
www.ohaus.com

With offices worldwide



P/N 80252765 © 2008 Ohaus Corporation, all rights reserved

Printed in China